



by Acclaim Lighting

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102
P: 866-845-5451 • F: 866-816-6165
E: service@acclaim-lighting.com • www.acclaim-lighting.com

TP6366-16

INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Secure the mounting plate (7) with box screws(6) to the outlet box(1).
2. Pull out the outlet wire and ground wire from the outlet box. Make wire connections with Wire Connector(2)
 - Black wire from light to Black wire (3) from power source.
 - White wire from light to White wire(4) from power source.
 - Loop the ground wire(5) to mounting plate(7) secure with a ground screw(8).
3. Attach the canopy(9) against the outlet box(1). Secure the mounting plate (7) using the mounting screws(10).
4. Insert G9 bulb (12, not included) into socket, then screw the Glass shade (13) into the socket.

DO NOT USE BARE HANDS TO TOUCH THE G9 BULB.

INSTALLATION IS NOW COMPLETE

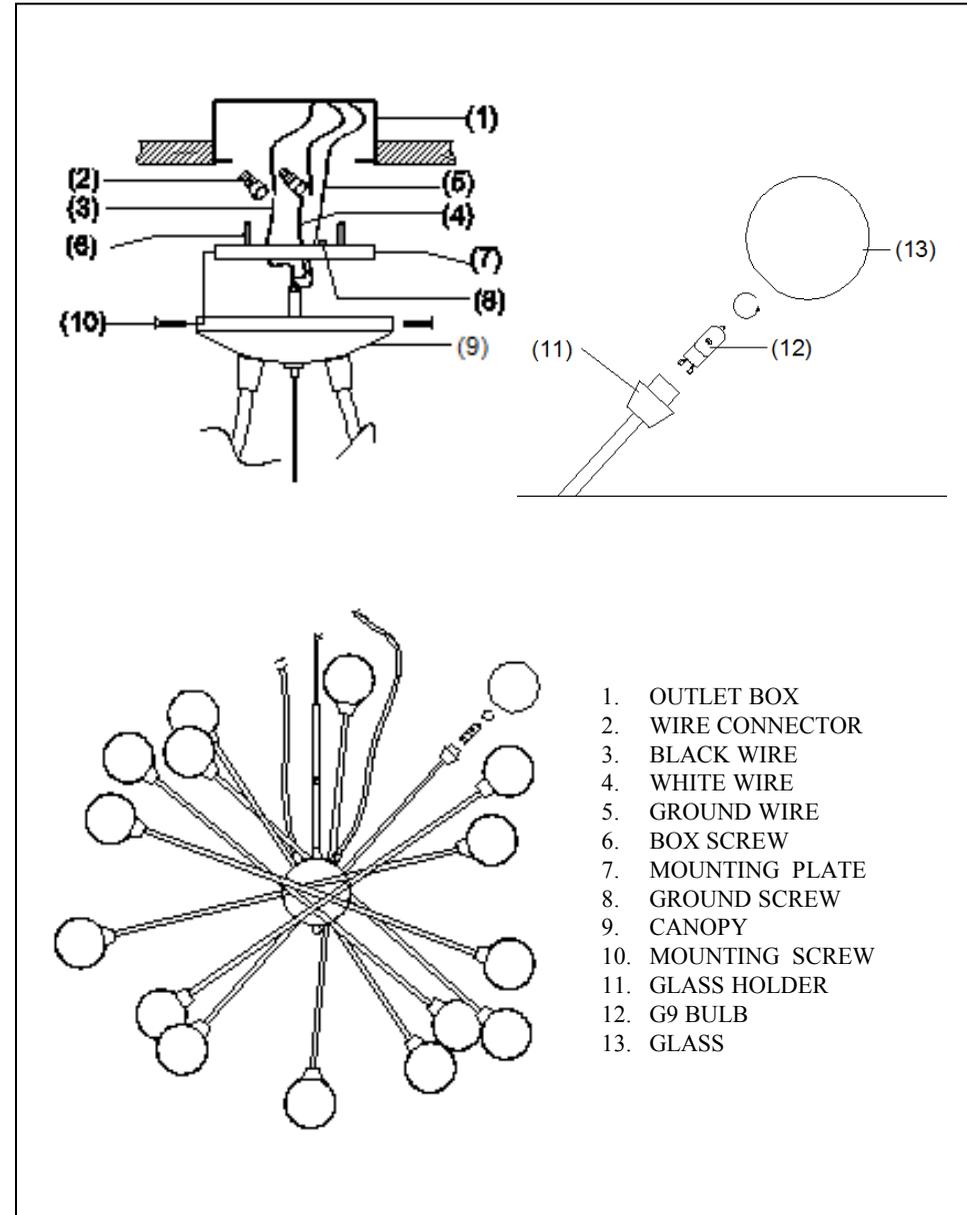

1. OUTLET BOX
2. WIRE CONNECTOR
3. BLACK WIRE
4. WHITE WIRE
5. GROUND WIRE
6. BOX SCREW
7. MOUNTING PLATE
8. GROUND SCREW
9. CANOPY
10. MOUNTING SCREW
11. GLASS HOLDER
12. G9 BULB
13. GLASS