



by Acclaim lighting

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102
Phone: (866) 845-5451 • Fax: (866) 816-6165
E: service@acclaim-lighting.com • www.acclaim-lighting.com

Item No . TP7912-R PENDANT INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.
Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.


GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION FOR PENDANT

1. Attach the socket assembly (20) to top of shade (21) and secure with thumb screws (19).
2. Install a 75 watt maximum medium base bulb (not included) into socket (20).
3. Remove the two ball finials (15) and remove crossbar (9) from canopy (14).
4. Loosen the set screw (17) on strain relief (16) outside of canopy.
5. Pass the cord through the wire clasp (13), cut the cord to desired length, making sure to leave 12" extra for wiring.
6. Thread two mounting screws (12) to the crossbar (9) and secure with the hex nut. Attach crossbar (9) to outlet box (1) using two box screws (11) provided with the outlet box. (Note: if the box screws with the outlet box are too short, use the 8-32 x 1" screws provided in the mounting hardware package).
7. Connect the white or ribbed fixture wire (7) to the white supply wire (3) in the outlet box using the twist-on wire connector (5) provided. Connect the black or smooth fixture wire (6) to the black supply wire (2) in the same manner. Install the fixture ground wire (8) and supply ground wires (4) onto the crossbar using the green ground screw (10) and wire connector.
8. Raise the canopy to the ceiling and carefully tuck the wires inside the outlet box (1). Spread the electrical splices so that the black wires are on one side of the outlet box and the white wires are on the other side. Line up mounting screws (12) with holes in canopy (14) and secure with ball finials (15), then tighten set screw (17).

INSTALLATION IS NOW COMPLETED. REFER TO FLUSHMOUNT INSTRUCTIONS IF YOU NEED FLUSHMOUNT INSTALLATION.

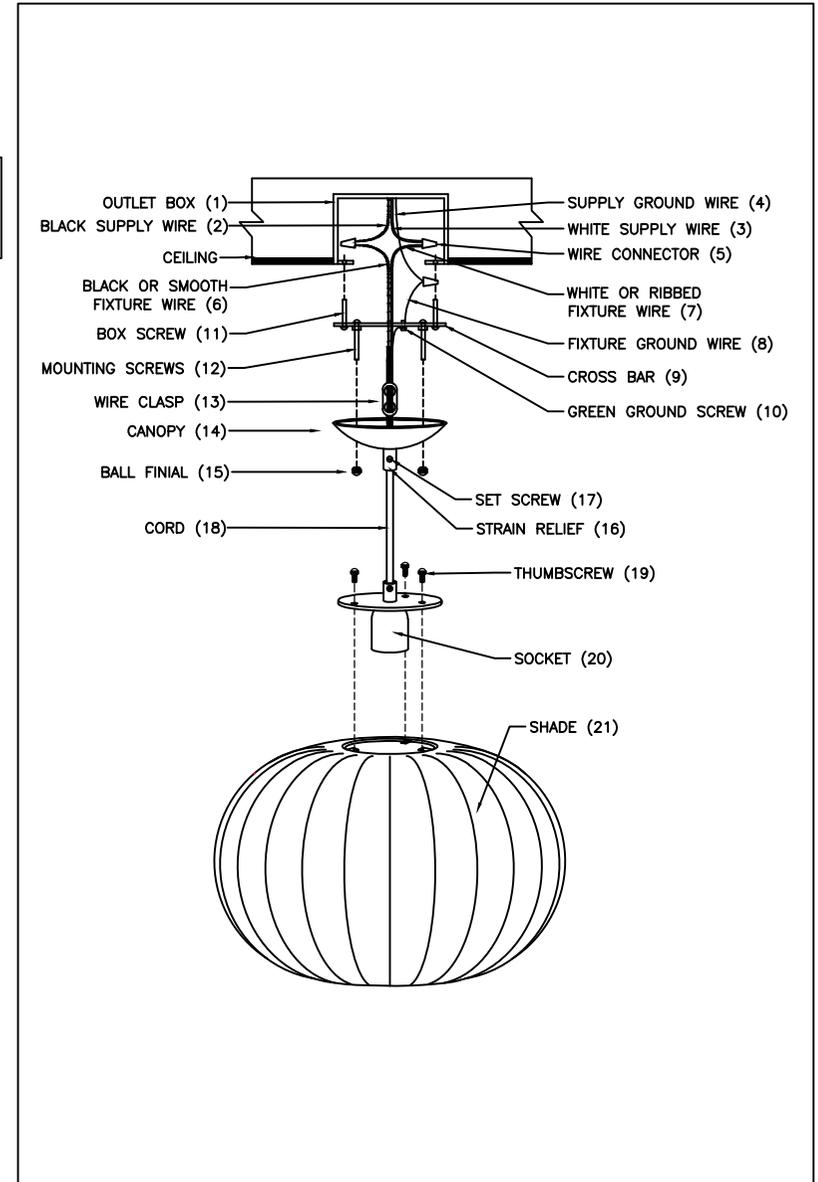



by Acclaim lighting

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102
Phone: (866) 845-5451 • Fax: (866) 816-6165
E: service@acclaim-lighting.com • www.acclaim-lighting.com

Item No . TP7912-R FLUSHMOUNT INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.
Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION FOR FLUSHMOUNT

1. Loosen the set screw (16) on strain relief (15) outside of canopy(13).
2. Remove the two ball finials (14) and remove crossbar (9) from canopy (13). Remove the wire clasp and the canopy (13) from cord (18).
3. Cut the cord (18) to desired length, making sure to leave 12" extra for wiring.
4. Feed the cord (18) through nipple (17) and attach to bottom of the strain relief (15) as shown. (Note: the nipple is provided in the mounting hardware package).
5. Thread the canopy (13) onto the connector (19) , then tightening set screw (16).
6. Attach the socket assembly (21) to top of shade (22) and secure with thumbscrews (20).
7. Install a 75 watt maximum medium base bulb (not included) into socket (21).
8. Thread two mounting screws (12) to the crossbar (9) and secure with the hex nut. Attach crossbar (9) to outlet box (1) using two box screws (11) provided with the outlet box. (Note: if the box screws with the outlet box are too short, use the 8-32 x 1" screws provided in the mounting hardware package).
9. Connect the white or ribbed fixture wire (7) to the white supply wire (3) in the outlet box using the twist-on wire connector (5) provided. Connect the black or smooth fixture wire (6) to the black supply wire (2) in the same manner. Install the fixture ground wire (8) and supply ground wires (4) onto the crossbar using the green ground screw (10) and wire connector.
10. Raise the canopy to the ceiling and carefully tuck the wires inside the outlet box (1). Spread the electrical splices so that the black wires are on one side of the outlet box and the white wires are on the other side. Line up mounting screws (12) with holes in canopy (14) and secure with ball finials (15).

INSTALLATION IS NOW COMPLETED. REFER TO PENDANT INSTALLATION INSTRUCTIONS IF YOU NEED PENDANT INSTALLATION.

