



# **TW40081**

## **INSTALLATION INSTRUCTIONS**

Please read carefully and save these instructions, as you may need them at a later date.

### **CAUTION**

**WARNING:** Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### **GENERAL**

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.


### **ASSEMBLY AND INSTALLATION**

1. Assemble the lamp arms (1/2/5/6) with allen screw(3).
2. Tuck the socket kits(7) into the groove of lamp body, and secure with wire clip(8) and Phillippe screw (9).
3. Make two 1/4" holes in wall, insert plastic anchors (11) into holes and then self-tapping screws (12) into anchors.
4. Assemble the shade sheet(14) and rack(13) to make lamp shade(15).
5. Put the shade (15) over the socket and secure it with the socket ring(16).
6. Install the bulb (17, not included) into the socket.

Do not exceed maximum suggested wattage - Max.60W

**DO NOT USE BARE HANDS TO TOUCH THE BULB.**  
**INSTALLATION IS NOW COMPLETE**

**See the details on the back side**

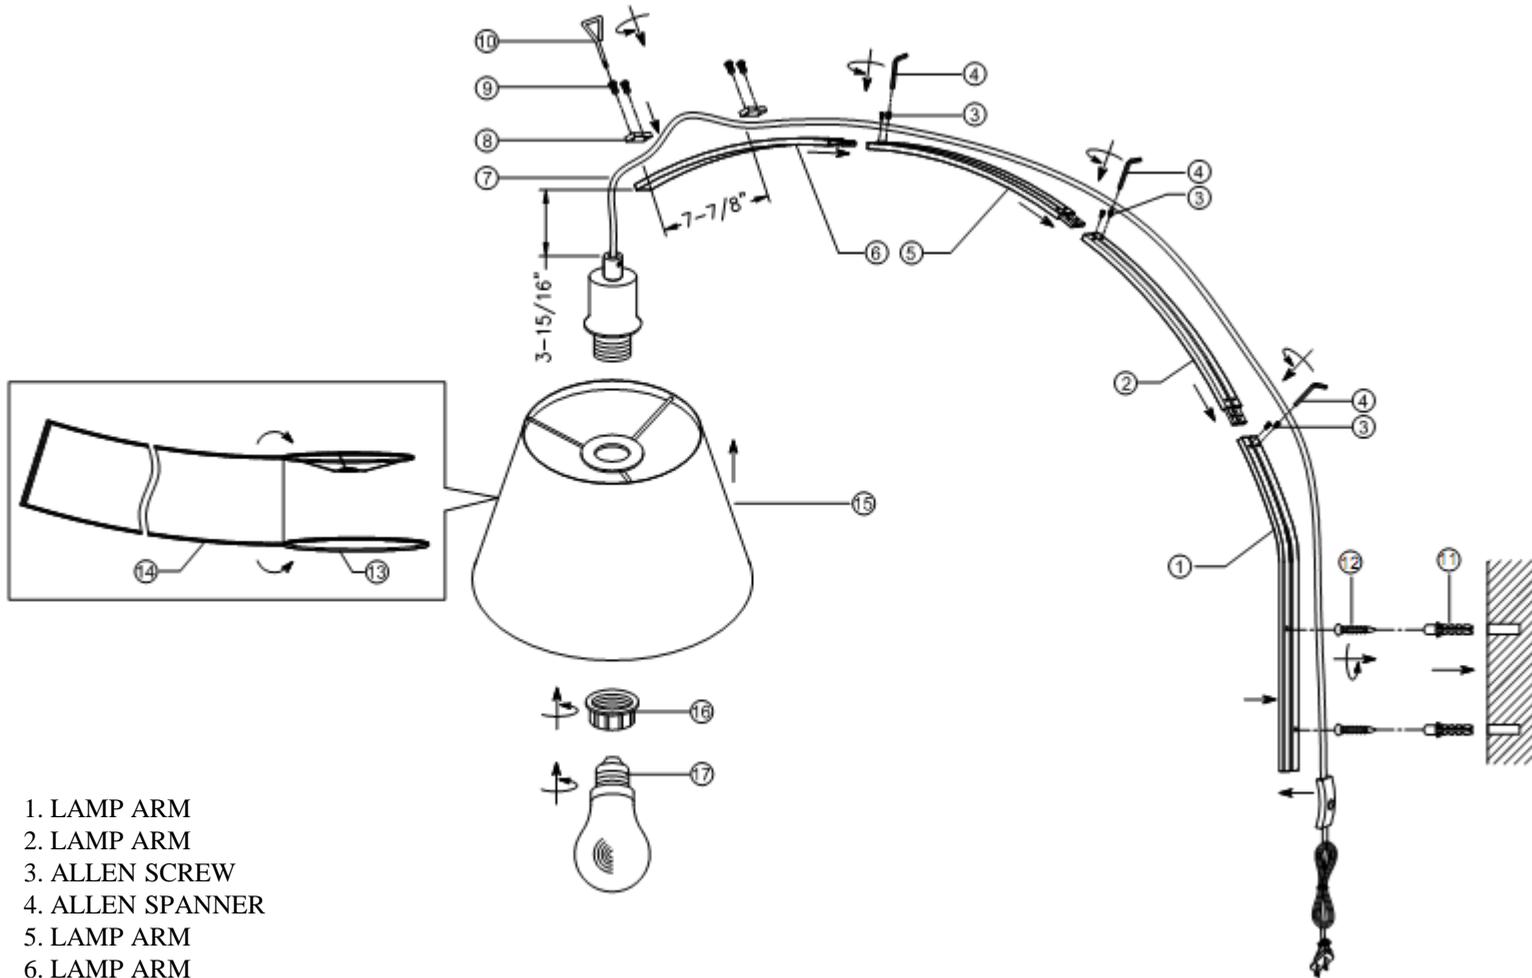

1. LAMP ARM
2. LAMP ARM
3. ALLEN SCREW
4. ALLEN SPANNER
5. LAMP ARM
6. LAMP ARM
7. SOCKET KITS
8. WIRE CLIP
9. PHILIP SCREW
10. TOOL
11. PLASTIC ANCHOR
12. SELF-TAPPING SCREW
13. RACK
14. SHADE SHEET
15. SHADE
16. SOCKET RING
17. BULB